

1










Kit 187009

- VW California T5 & T6, 4-dr Bus, 03-15 / 15-24
- VW California T7, 4-dr Bus, 22-
- VW Caravelle T5 & T6, 4-dr Bus, 03-15 / 15-24
- VW Multivan T5 & T6, 4-dr Bus, 03-15 / 15-24
- VW Transporter T5 & T6, 4-dr Van, 03-15 / 15-24
- VW Shuttle T5 & T6, 4-dr Bus, 03-15 / 15-24




ISO 11154-E


This kit is only for vehicles with T-Profile.

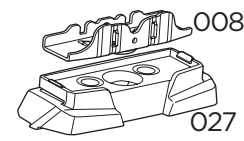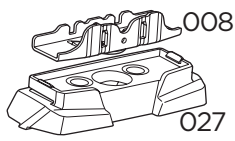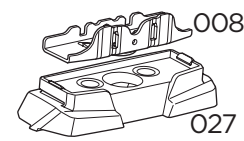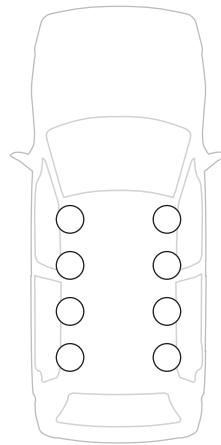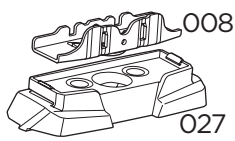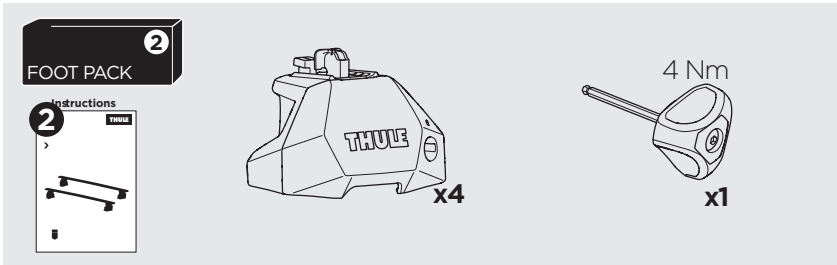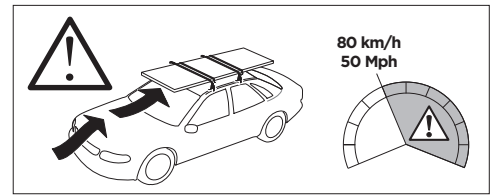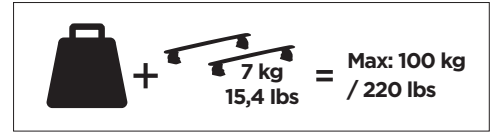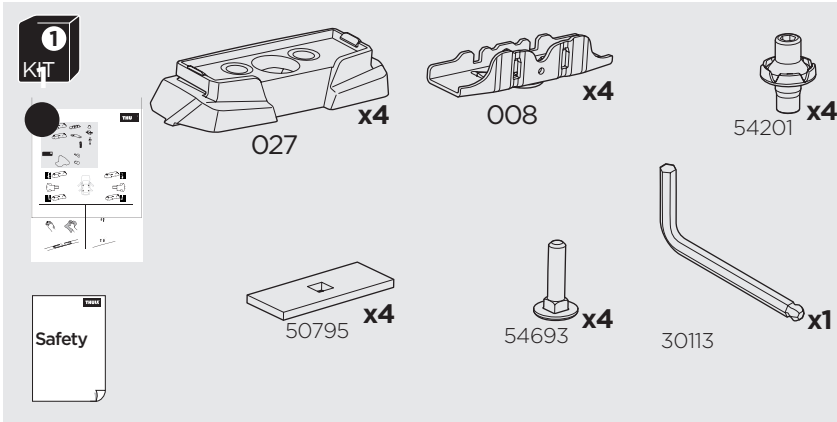


1

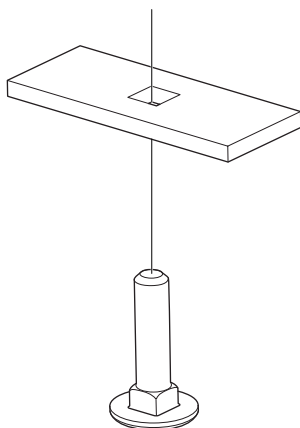


2

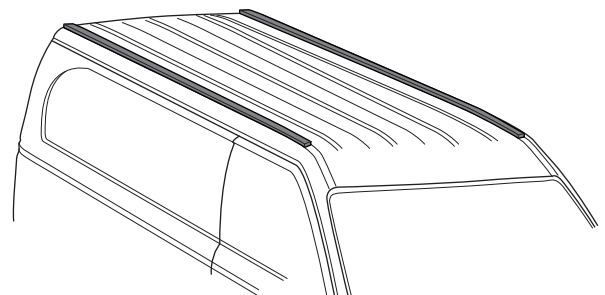


3

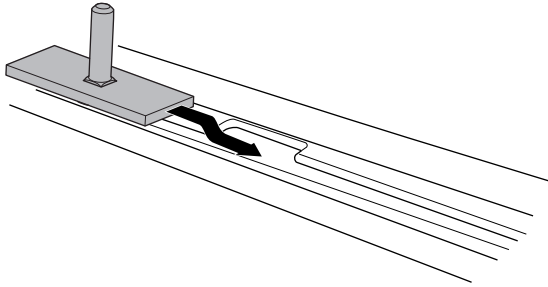


4

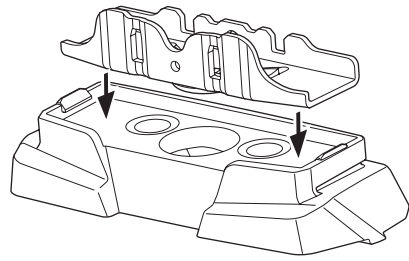

5

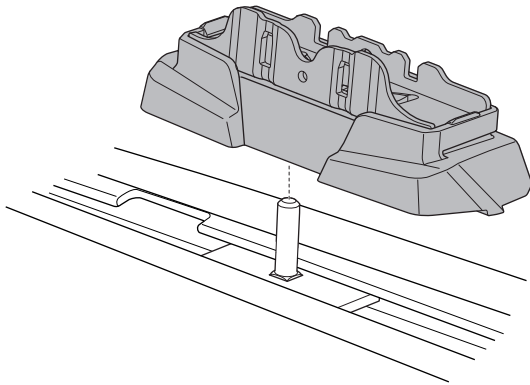

6

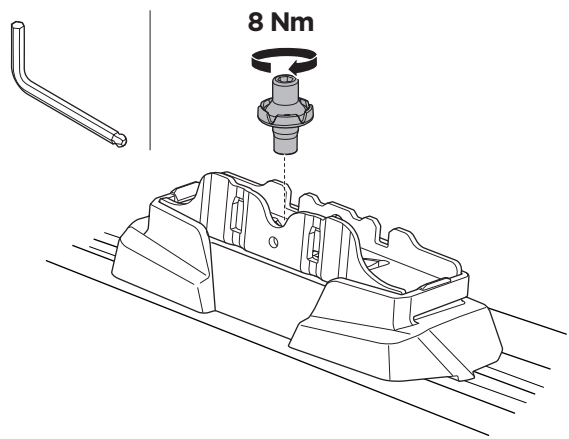

7

